

BlumSafe New Keypad 2.0 (Code, Fingerprint, RFID Card) Operating Instructions

Operation

1, User password: 1234; Manager password: No; The fingerprint library is empty, and any fingerprint can open the electronic lock. But after registering the fingerprint, only the registered fingerprint can be used to open the electronic lock.

1.1, Fingerprint: open the door

Place your finger on the fingerprint window without moving. If the fingerprint comparison is successful, the unlock icon will be displayed and the lock will be opened. If the fingerprint comparison fails, the unlock failure icon is displayed.

1.2, Password: open the door

Press any touch key, wake up the display, enter the password, and then press the "#" key. If the password is correct, the unlock icon is displayed and the lock is opened. If the password is incorrect, the unlock failure icon is displayed.

1.3, IC card: open the door

Press any touch button to wake up the display, swipe the card, and if the IC card comparison is successful, the unlock icon will be displayed and the lock will be opened. If the IC card is incorrect, display the unlock failure icon

2, Close the door: press '#' to close the door.

Programming

3, How to set fingerprint and IC card

Fingerprint group: 30pcs

IC cards: 100pcs

Press any touch key to wake up the display, and then press the red coding switch without listening to the sound as follows:

1. The buzzer sounds once and prompts as follows. You can release your hand and register and change your password according to the display:

Sounds	LCD	
Short press to set and release with one sound	1-EnrollFinger	Set fingerprint
	2-EnrollCard	Add IC card
	3-ChangeCode	Change password

2. The buzzer sounds twice and prompts as follows. You can release it and delete and reset the password according to the display:

Sounds	LCD	
Long press and hold the setting button until it rings 2 times to release	1-DelFingerprint	Delete all fingerprint
	2-DelCard	Delete all LC card

	3-ResetCode	Restore factory password 1234
--	-------------	----------------------------------

3. The buzzer will sound for a long time and prompt as follows, which can be released. The system will set the factory value, clear all fingerprints, clear the IC, and reset the password to 1234

4、 Low voltage prompt

When opening the door, a "Low Battery" meter low voltage prompt will appear.

Mute settings: press **

Turn on sound: press **

Videos for Programming:

