

SIMPLEX LOCK BOX
SLB-8512
STEELHEADOUTDOORS.COM
612-326-4244


IMPORTANT: Read the following instruction sheet carefully, programming the simplex lock is straightforward if you follow the directions carefully.

Our Fast Access Lock Box utilizes a genuine Simplex lock from KABA. These are very dependable and have no batteries or electronics. They operate by a combination that can be a single button press, or multiple buttons pressed together. Once a button has been pressed, it can no longer be used in the combination. Turning the knob LEFT (counterclockwise) resets the buttons for a fresh combination entry, turning the knob RIGHT (clockwise) attempts to unlock the lock. The knob will only be allowed to turn RIGHT (clockwise) after the correct combination has been entered.

Your simplex lock is presently set with the combination noted in the following steps.

TO OPEN:

- 1) Turn knob LEFT (counterclockwise) and release to activate all buttons.**
- 2) Push #2 and #4 together.**
- 3) Push #3.**
- 4) Turn the knob RIGHT (clockwise) to open.**

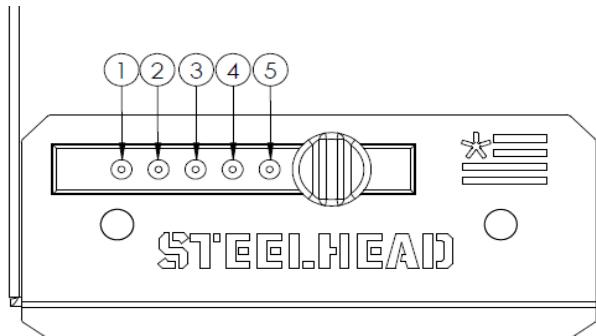

Note: Our lockbox is designed with foam that compresses to hold the contents firmly in place. Light pressure on the lid may be required to lock and unlock.

Make a habit of turning the knob LEFT (counterclockwise) before pushing the combination. Should anyone attempt an improper combination, this action clears off such an attempt and reactivates the buttons.

TO LOCK:


Turn the knob left (counterclockwise) until it stops.

TO CHANGE YOUR COMBINATION:

You may easily change to a new combination, using one, all five, or any number of buttons you wish, in any order. Two or more buttons may be pushed at one time as part of your new combination. Simple two and three button combinations are easy to remember and still provide top security. Note: a particular button can be pushed only once in establishing a new combination. WRITE YOUR NEW COMBINATION ON THE BACK OF THIS MANUAL AND KEEP IN A SAFE PLACE.

Suggestion: you or a helper can video the combination when changing to ensure the exact combination can't be misinterpreted. The video can be deleted after practicing the combination several times.

- 1) Open the door.
- 2) Relock the lock.
- 3) Press the buttons in the proper order of the EXISTING combination.
- 4) On the back side of the door, there is a combination change access hole. Insert the included Allen wrench into the access hole and use it to press the reset tab towards the inside of the box. To the RIGHT in the picture below.

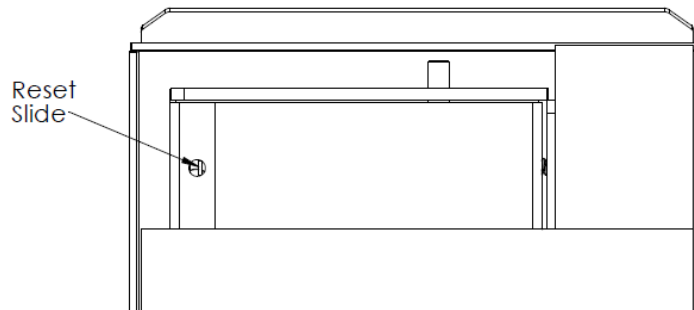

- 5) Turn the knob LEFT (counterclockwise) to “clear-out” the existing combination.
- 6) Press the buttons firmly and deliberately in the desired sequence for your new combination. If you make a mistake, simply repeat step 4.
- 7) Turn the knob to the RIGHT (clockwise) to set your new combination into the mechanism.
- 8) Turn the knob full LEFT to lock the lock.

Your new combination is now installed. Test your combination at least three times before locking your box.

We have attached the manufacturers guide for figuring out a lost combination (orange sheet), but it requires the door to be open.

The included Allen wrench will remove the lock cover, but do not attempt this unless you intend to replace the lock.

The lock box features 4 anchor holes in the base that are 5/16 in diameter, they are sized perfectly for ¼ inch bolts and washers or similar sized wood screws if you choose to anchor your pistol box in place. This is the most secure method, but if this is not possible the optional cable is significantly stronger than other cables on the market.

To utilize the cable, loop the cable around your desired anchoring point and pass the straight end through the loop on the other end. Next, place the stop inside the pistol box in the notch on the side and lock the box shut.

Please contact Steelhead Outdoors if you have any questions or concerns.

612-326-4244

Thank You!

